



CARGO MOUNTING HARDWARE KIT

INSTALLATION INSTRUCTIONS

457-5009 / Cargo Mounting Hardware Kit for use with **POLARIS® LOCK & RIDE® UTV**


Thank you for purchasing an Open Trail® Cargo Mounting Hardware Kit. This high-quality kit is designed to attach accessories to your Polaris® Lock & Ride® System. Before you begin, verify that all components are included in the bag and read all instructions. If you have any questions or if you are missing any components, contact us at opentrailusa.com/contact-us.

⚠ WARNING: RISK OF SEVERE INJURY OR DEATH

- Read and understand all instructions before assembling and using the Open Trail® Cargo Mounting Hardware Kit
- The end user must follow basic precautions to reduce the risk of personal injury and/or damage to equipment

WHAT'S INCLUDED

Component	Qty
A Zinc-Plated Steel Bolt	2
B EPDM Bushing – 1.27 x 1.33	2
C PE High-Density Spacer – 1.13 x 1.3	2
D EPDM Bushing – 1.27 x 1.4	2
E Washer	2
F Comfort-Grip Plastic Three-Arm Knob	2
G Zinc-Plated Alloy Steel Oval Eye Nut – M8	2
H Zinc-Plated Steel Split Lock Washer	2
I Zinc-Plated Steel Hex Nut – M8	2

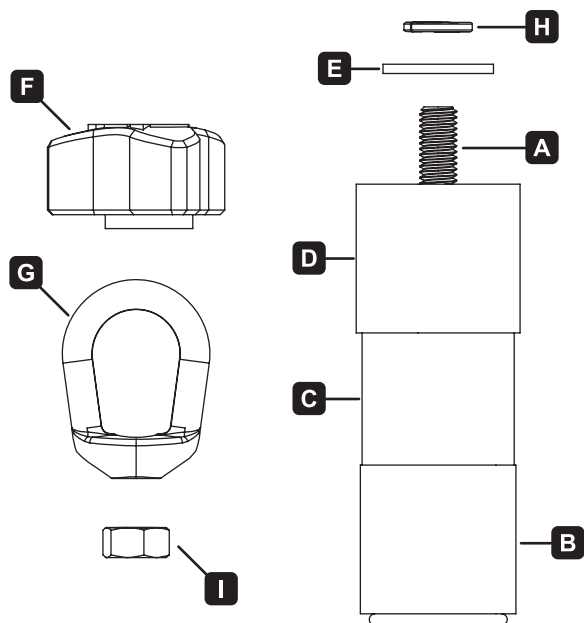

INSTALLATION TOOLS REQUIRED (not included)

- 13mm socket
- Ratchet

INSTALLATION

NOTE: Make sure your vehicle is clean and free of debris before installation. If using the accessory kit to attach another accessory to the vehicle, loosely fasten the accessory to the accessory mounting kit first.

1. Insert the assembly of parts A, B, C and D (and accessory) into the desired location as shown in figure 1.
2. Place the washer (E), lock washer (H) and selected fastener (F, G or I) onto the bolt.
3. Tighten the fastener until there is adequate tension to secure the accessory.

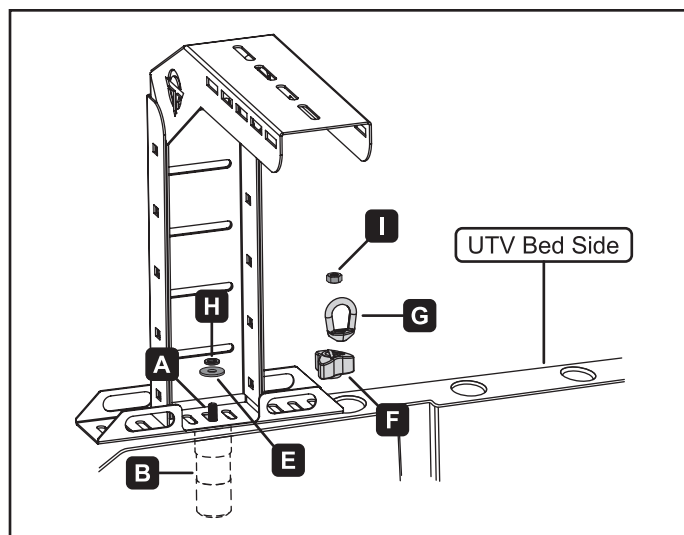


Figure 1.