



CARGO MOUNTING HARDWARE KIT

I N S T A L L A T I O N I N S T R U C T I O N S

457-50100 / Cargo Mounting Hardware Kit for use with CAN-AM® LINQ® SYSTEM

Thank you for purchasing an Open Trail® Cargo Mounting Hardware Kit. This high-quality kit is designed to attach accessories to your Can-Am® LinQ® System. Before you begin, verify that all components are included in the bag and read all instructions. If you have any questions or if you are missing any components, contact us at opentrailusa.com/contact-us.

⚠ WARNING: RISK OF SEVERE INJURY OR DEATH

- Read and understand all instructions before assembling and using the Open Trail® Cargo Mounting Hardware Kit
- The end user must follow basic precautions to reduce the risk of personal injury and/or damage to equipment

WHAT'S INCLUDED

Component	QTY
A Lower Bracket	2
B Threaded Post	2
C Rubber Bushing	2
D Upper Bracket	2
E Hex Drive Flat Head Screw	4
F Comfort-Grip Plastic Three-Arm Knob	2
G Washer	2
H Zinc-Plated Alloy Steel Oval Eye Nut – M8	2
I Zinc-Plated Steel Split Lock Washer	2
J Zinc-Plated Steel Hex Nut – M8	2

INSTALLATION TOOLS REQUIRED (not included)

- 2.5mm hex key
- Ratchet
- 13mm socket
- Torque wrench

INSTALLATION

NOTE: Make sure your vehicle is clean and free of debris before installation.

1. Assemble parts A, B and C and insert through the bottom of the desired location as shown in the image.
2. Place upper bracket (D) onto the threaded post (B) and insert screws (E) into the assembly.
3. Tighten the screws evenly; torque to 2 ft/lb.
4. Attach the accessory to the mount.
5. Place the washer (G), lock washer (I) and selected fastener (F, H or J) onto the threaded post.
6. Tighten the fastener until there is adequate tension to secure the accessory.

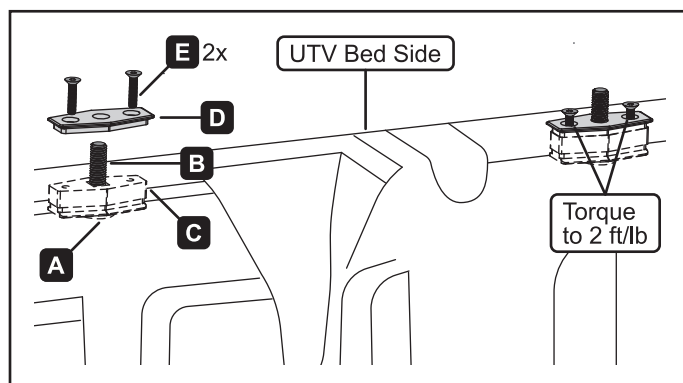
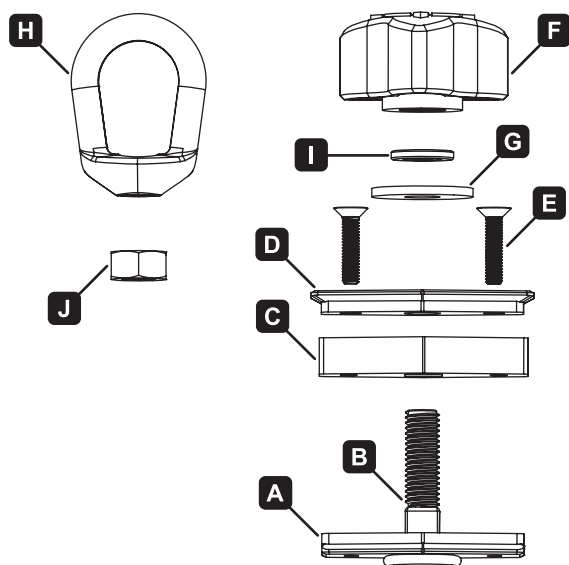


Figure 1.