

INSTALLATION INSTRUCTIONS

457-5012 / Cargo Mounting Hardware Kit for use with the **KAWASAKI® CARGO MOUNTING SYSTEM**


Thank you for purchasing an Open Trail® Cargo Mounting Hardware Kit. This high-quality kit is designed to attach accessories to your Kawasaki® Cargo Mounting System. Before you begin, verify that all components are included in the bag and read all instructions. If you have any questions or if you are missing any components, contact us at opentrailusa.com/contact-us.

⚠ WARNING: RISK OF SEVERE INJURY OR DEATH

- Read and understand all instructions before assembling and using the Open Trail® Cargo Mounting Hardware Kit
- The end user must follow basic precautions to reduce the risk of personal injury and/or damage to equipment

WHAT'S INCLUDED

Component	Qty
A Comfort-Grip Plastic Three-Arm Knob	2
B Zinc-Plated Alloy Steel Oval Eye Nut – M8	2
C Zinc-Plated Steel Split Lock Washer	2
D Anchor	2
E Nut	4
F Zinc-Plated Alloy Steel Hex Drive Flat Head Screw – M6	4
G Washer	2
H Zinc-Plated Steel Hex Nut – M8	2

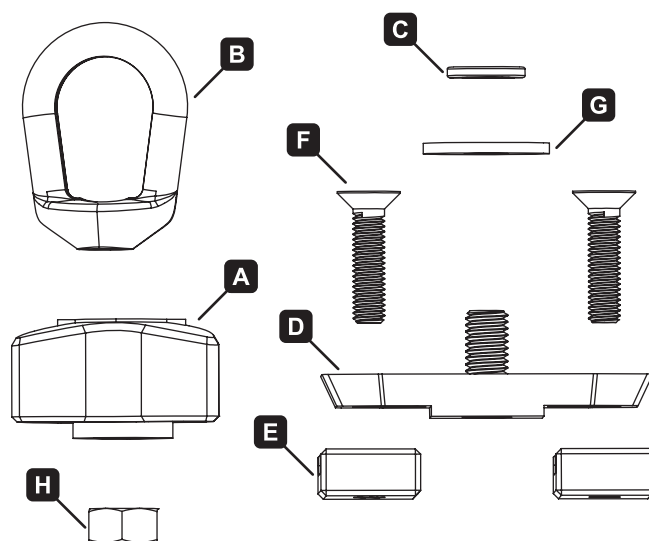

INSTALLATION TOOLS REQUIRED (not included)

- 4mm hex key
- 13mm socket
- Ratchet
- Pick
- Torque wrench

INSTALLATION

NOTE: Make sure your vehicle is clean and free of debris before installation.

1. Assemble parts E, F and D and insert into the desired location by holding onto the threaded stud and turning the nuts (E) as shown in figure 1.

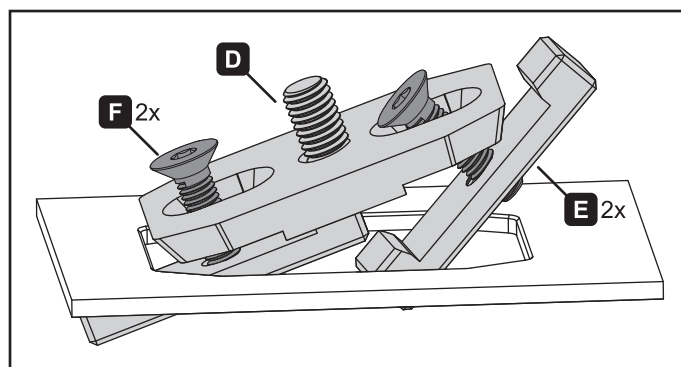


Figure 1.

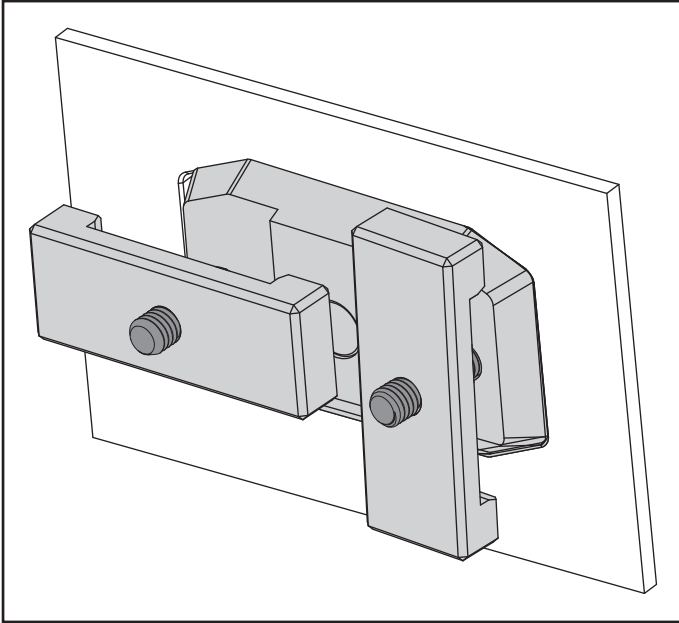


Figure 2.

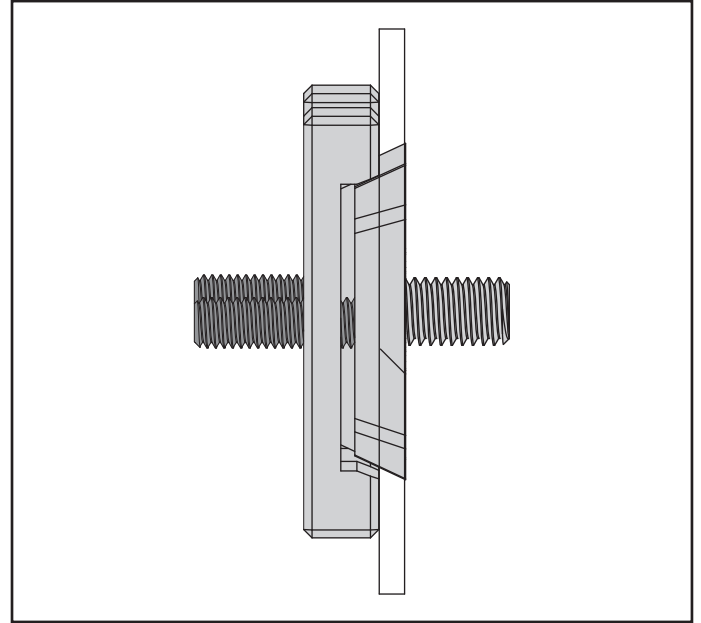


Figure 3.

2. While continuing to hold the anchor stud, turn the nuts (E) perpendicular to the anchor (D) (figure 2).
3. Hold pressure against the nuts (E) by lifting on the anchor stud and tighten the screws (F) evenly, torque to 8 ft/lb (figure 3).
4. Attach the accessory to the mount.
5. Place the washer (G), lock washer (C) and selected fastener (A, B or H) onto the anchor stud.
6. Tighten the fastener until there is adequate tension to secure the accessory.